

DIAL LONG LINE CIRCUITS

SD-96589-01—96590-01—96591-01

TESTS USING TEST POSITION SD-96594-01

1. GENERAL

1.01 This section provides a method of testing the dial long line circuits using the associated test position. It also provides a procedure for taking the equipment out of service and the installation of a new unit.

1.02 This section is reissued to add the operation of the SL key on the pulse repeating test set in Tests A and B. This reissue does not affect the Equipment Test List.

1.03 Jacks other than those used for LOOP and LEAK pulsing on test position are for use in conjunction with circuit requirements tables listed in related SD for relay maintenance purposes.

1.04 The following tests are covered.

A. Loop Pulsing Test: The loop pulsing test is made to check that the percent of break is below the specified maximum limit.

B. Leak Pulsing Test: The leak pulsing test is made to check that the percent of break is above the specified minimum limit.

1.05 In testing, faulty unit is inserted in the number 10 slot on the shelf which is set up for making pulse repeating tests.

1.06 Access to test position is through the IN and OUT jacks. Battery for the test sets is obtained from the A and B jacks.

2. APPARATUS

All Tests

2.01 Pulse repeating test set J34720A (SD-31667-01).

2.02 Pulsing test set J34717A (SD-31481-01).

2.03 Patching cords, two P2J cords, each 6 feet long, equipped with two 310 plugs (2P9B cords).

2.04 Patching cord, P3E cord, 2 feet long, equipped with two 310 plugs (3P7D cord).

2.05 Patching cords, two P3E cords, each 6 feet long, equipped with two 310 plugs (3P7A cords) (for input or output connections or both).

3. PREPARATION

STEP

ACTION

VERIFICATION

All Tests

- | | | |
|---|---|------------------------------------|
| 1 | Obtain a spare unit. | |
| 2 | Determine condition of line (busy or idle). | Ground at TST jack indicates busy. |
| 3 | Remove unit from shelf. | |
| 4 | Insert spare unit in vacated shelf. | |

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

SECTION 201-832-502

STEP	ACTION	VERIFICATION
5	Place unit under test in the test position.	
6	Connect pulse repeating test set to pulsing test set as shown in Fig. 1.	
7	Connect pulsing test set to relay under test as shown in Fig. 1.	

4. METHOD

STEP	ACTION	VERIFICATION
-------------	---------------	---------------------

A. Loop Pulsing Test

8	At pulse repeating test set— Set key selector on pulse repeating test set to apply 2400 ohms in series with pulsing contacts of pulsing test set.	
9	◆Operate SL key.◆	
10	At pulsing test set— Operate PR key.	
11	Operate LP key.	
12	Read percent break on output meter of pulse repeating test set.	Maximum break on output meter is 75 percent.
13	At pulsing test set— Operate RLS key.	Pulsing ceased.

B. Leak Pulsing Test

8	◆At pulse repeating test set— Operate SL key.◆	
9	At pulsing test set— Operate PR key.	
10	Operate LK key.	
11	Operate LK-A key on the operating test set.	
12	Read percent break on output meter.	Minimum break on output meter is 38 percent.
13	At pulsing test set— Operate RLS key.	Pulsing ceased.

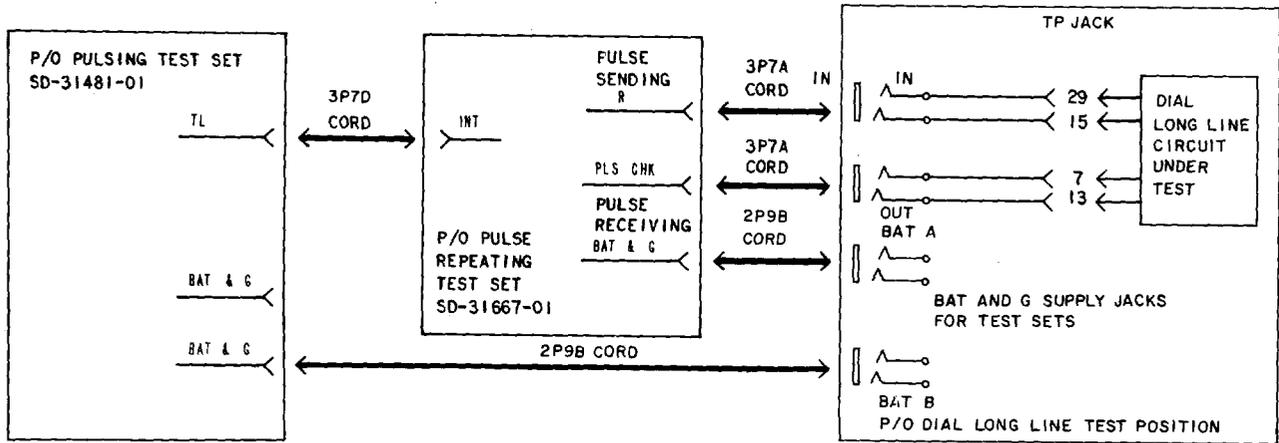


Fig. 1—Test Equipment Connections