

# SUBSCRIBER SETS — 685B

## USED WITH COIN COLLECTORS

### CONNECTIONS

TABLE A  
CONNECTIONS

Type of Service	Terminal Location	Subscriber Set Connections (Wire or Lead)																
Prepay Manual and Dial Type Coin Collectors		Ringer Lead				Straps Network to Terminal Block		S-36 Relay Lead				Local Wiring from Coin Collector						
		S	BK	R	S-R	S-BR	BR-Y	R	Y	BK*	S	G	R	BK	Y	G	R	Y
Handset Types: 191, 195, 196, 197 (CN, DN, GN, HN) (CNS, DNS, GNS, HNS) (CNT, DNT, GNT, HNT) 220, 223 (C, D, G, H) (CT, DT, GT, HT) 230, 233 (C, D, G, H)	Network	K	—	—	—	C	A	—	—	B	—	GN	R	B	RR	—	—	—
	Terminal Block	—	L1	L2	1	L2	1	L1	L2	—	K	—	—	—	—	L2	L1	K

\* Sets may have BK lead from the S36 relay connected to terminal 2 of terminal block. Move strap to terminal B of 425E network.

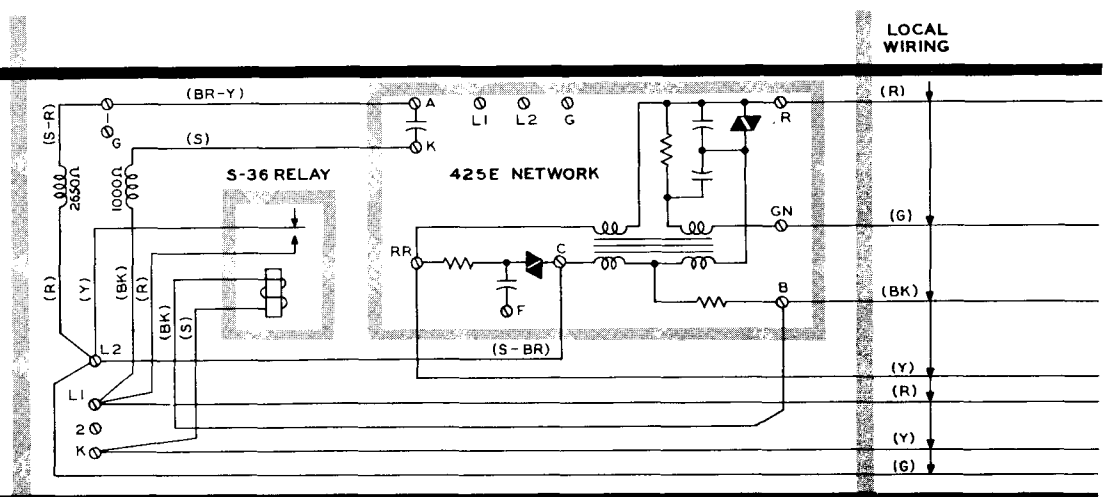


Fig. 1 - Circuit Diagram for Connection With Coin Collectors