

TELEPHONE SETS - 535A, B

(AMPLIFIER SETS FOR NOISY LOCATIONS) - COMMON BATTERY - CONNECTIONS

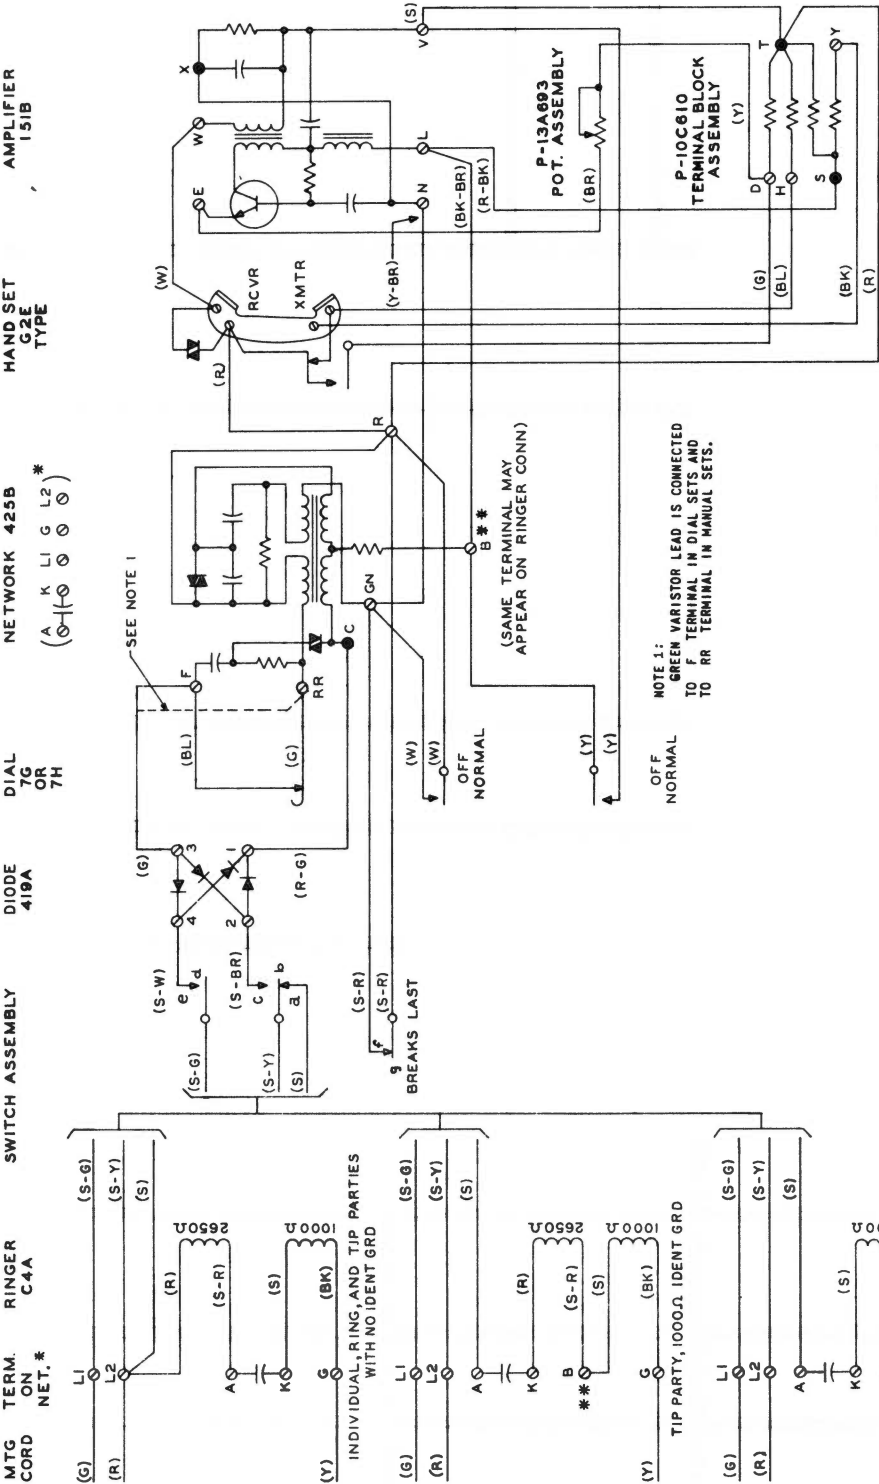


TABLE A
LINE AND RINGER CONNECTIONS

Wire or Lead	Indi-vidual or Bridged	Ring Party	Tip Party	Tip Party Identification Ground	
				Normal Connections	Ringer Reversal When Connected To Long Line Equip
Ringer Leads	R	L2	L2	1000N	2650N
	BK	L1	G	K	B
	S	K	K	B	K
	S-R	A	A	B	K
Switchhook Lead	S	L2	L2	1000N	2650N
	R	L2	L2	K	B
	G	L1	L1	B	K
	Y	5	5	G	K
Mounting Cord in Set	BK	E1	E1	1000N	2650N
	R	R	R	B	K
	G	G	G	B	K
	Y	Y	Y	G	K
Mounting Cord at O Connecting Block	BK	B	B	1000N	2650N
	R	R	R	B	K
	G	G	G	B	K
	Y	Y	Y	G	K
Line Wire at Tip Connecting Blk Grd	R	R	R	1000N	2650N
	BK	B	B	B	K
	G	G	G	B	K
	Y	Y	Y	G	K

Note: To silence ringer for all classes of service except tip party ground identification, connect terminal on network BK ringer lead to K

REAR When telephone set is used with 1A1 key telephone system, switch contact ed must break last when handset is restored.