

SERVICE

211 HAND TELEPHONE SETS

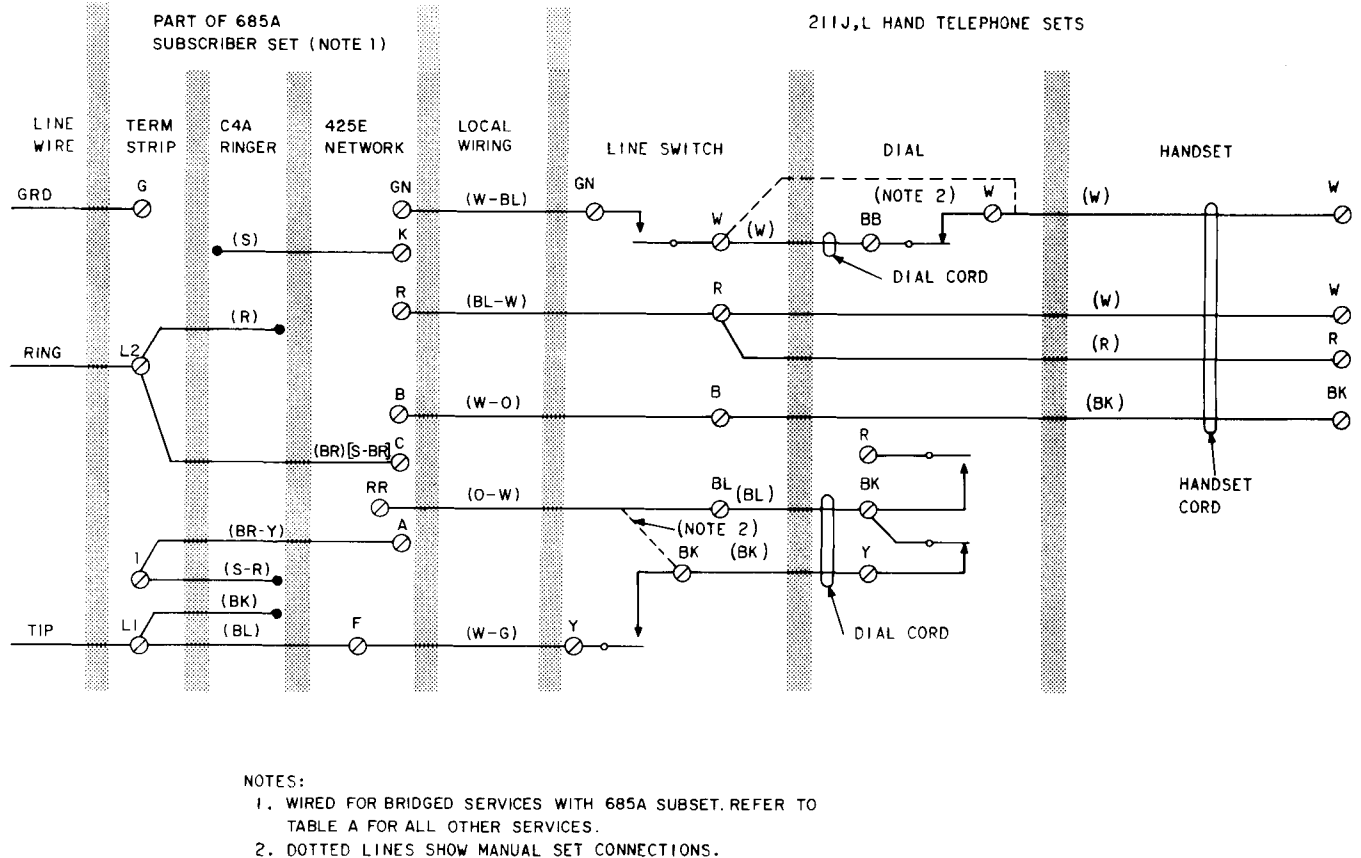


Fig. 1—211J or L Hand Telephone Set Connections Used With 685A Subscriber Set

TABLE A

**LINE AND RINGER CONNECTIONS
685A OR 686A SUBSET USED WITH
211J, L, N, OR P HAND TELEPHONE SETS**

WIRE OR LEAD		INDIVIDUAL OR BRIDGED	RING PARTY (NOTE)	NEGATIVE	POSITIVE
				RING STATION (NOTE 1)	
				1 AND 5	3 AND 6
Ringer Leads (Note 2)	(R)	L2	L2	G	L2
	(BK)	L1	G	G	L2
	(S)	K*	K*	A*	A*
	(S-R)	1	1	K*	K*
426A Tube Leads (3 elements) (686A only)	(BK)			K*	K*
	(Y)			L2	G
	(R)			G	L2
Line Wires	RING	L2	L2	L2	L2
	TIP	L1	L1	L1	L1
	GRD	G	G	G	G

Notes:

1. Reverse tip and ring for tip party service.
 2. To silence ringer permanently, connect (R) and (BK) ringer leads to K on the terminal strip.
- * Terminal on 425E network.

TABLE B

ASSOCIATED APPARATUS

CLASS OF SERVICE	SUBSCRIBER SET
Individual Lines 2-Party Flat Rate 2-Party Message Rate (Ring Party Only) 4-Party Semiselective Multiparty Divided Code Regular PBX Stations 750A and 755A Keyless Stations	685A
4-Party Full Selective 8-Party Semiselective	686A

Note: No message rate or tip-party identification can be provided for tip-party station.

TABLE C

**61M FILTER CONNECTIONS
(NOTE)**

FILTER LEADS (NOTE)	FILTER LEAD TERMINATIONS	
	211J AND L	211P
BK	BK of Dial	BL of Dial
Y	Y of Dial	G of Dial
R	BK of Line Switch	1 of Line Switch

Note: The 211-type set is arranged for, but not equipped with, a 61M filter for radio frequency suppression. When this filter is required, remove lead from G of dial and 1 of the line switch on the 211 J and L sets and Y of dial and BK of the line switch on the 211P set and connect as shown in Table C.

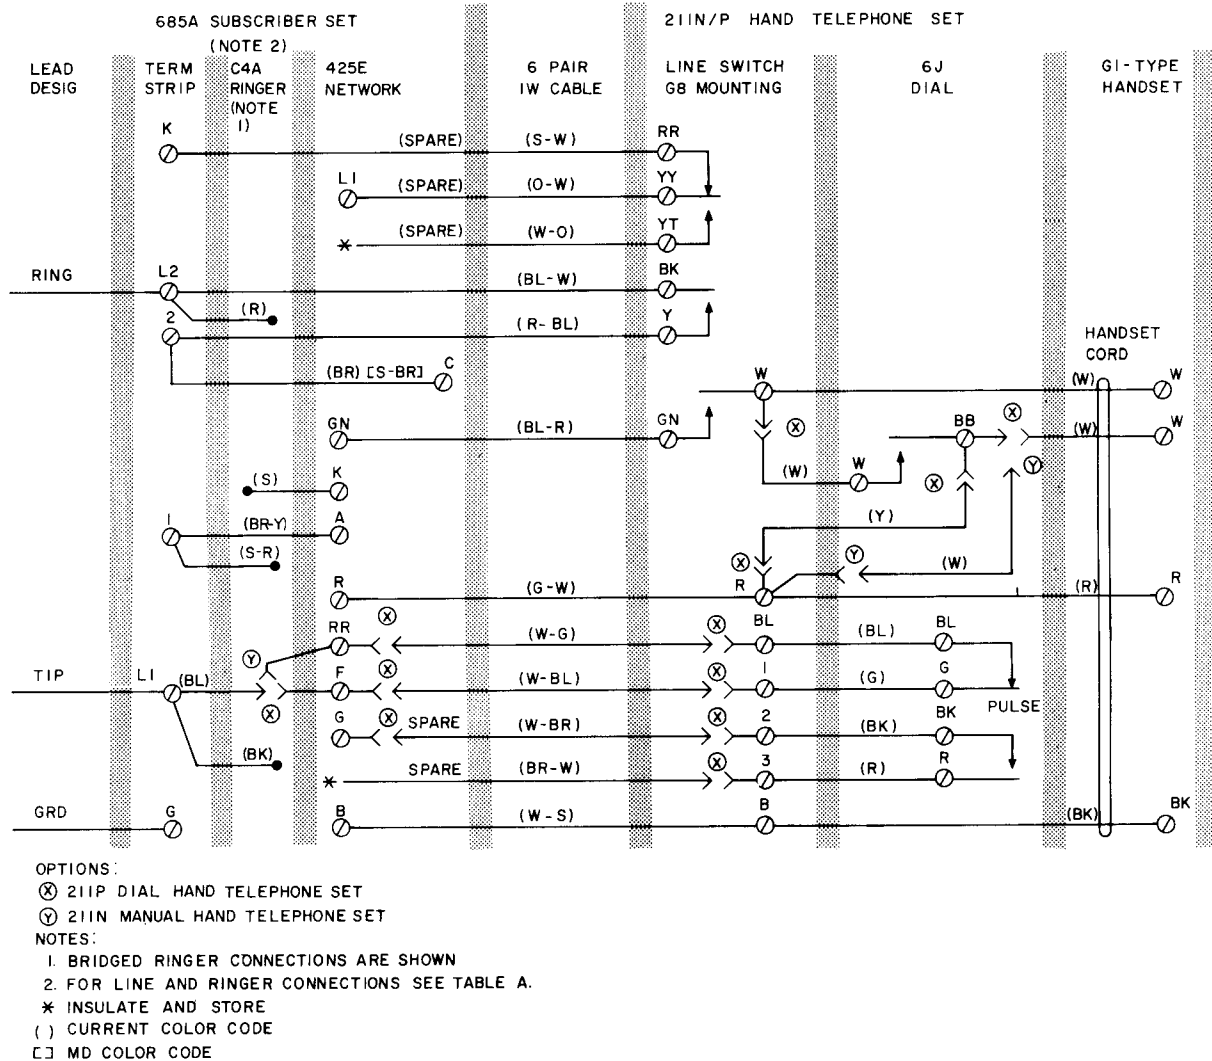


Fig. 2—211N/P Hand Telephone Set Connections Used With 685A Subscriber Set