

TELEPHONE SETS—302E, G, 5302G
COMMON BATTERY—CONNECTIONS

HAND SET
FI, F4, OR G

DIAL
6A, 5H (302)
6H, 5M (5302)


SWITCH
ASSEMBLY

INDUCTION
COIL
101A

CAPACITOR
195A

RINGER
BIAL OR BIA

MOUNTING
CORD

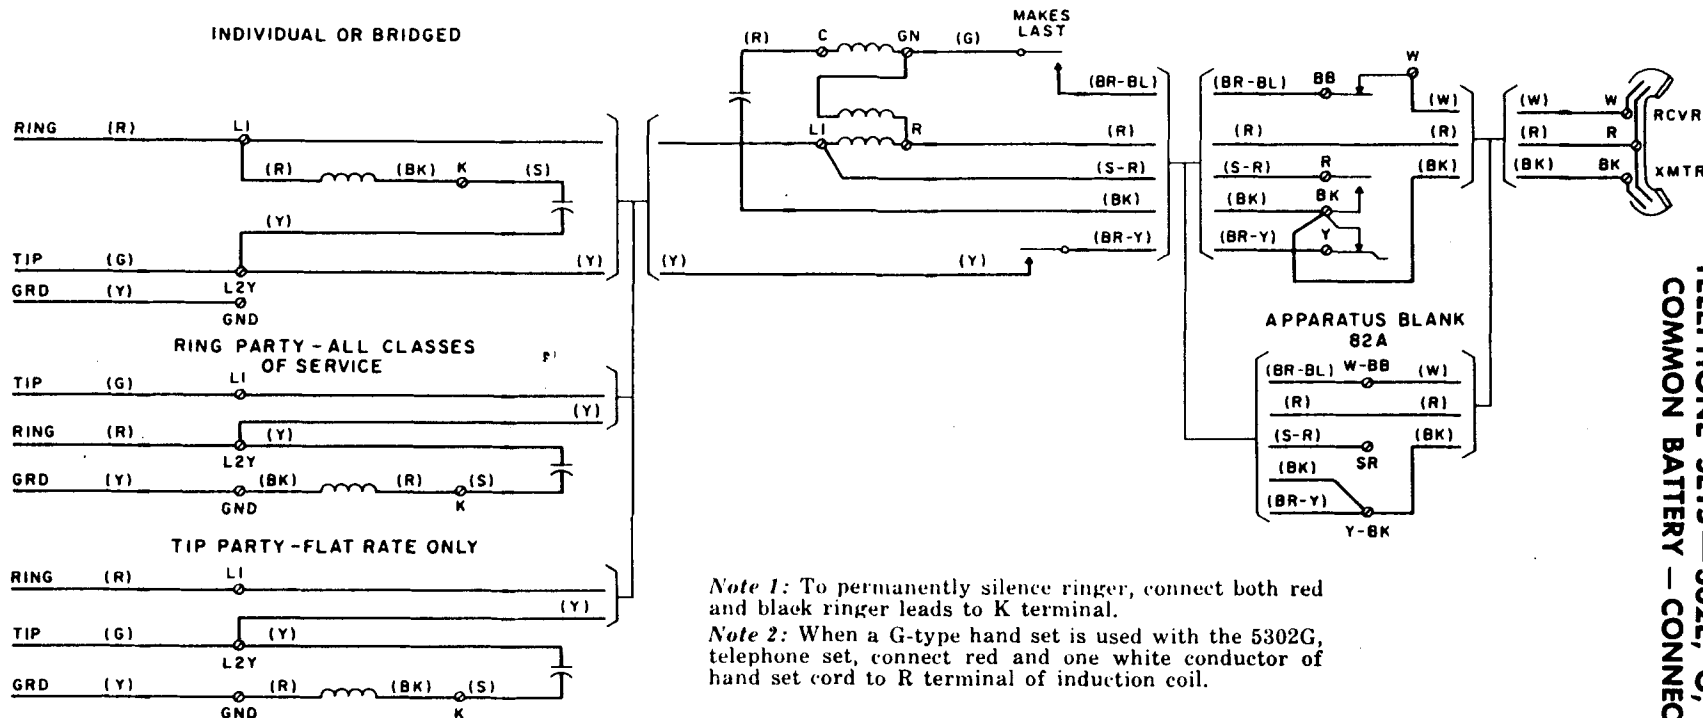

Note 1: To permanently silence ringer, connect both red and black ringer leads to K terminal.

Note 2: When a G-type hand set is used with the 5302G, telephone set, connect red and one white conductor of hand set cord to R terminal of induction coil.

TABLE A
FILTER (OPTIONAL)

Type Filter	Filter Leads	Filter Lead Termination
302G	5302G	
61P or 61L	BK	BK of Dial
	Y	Y of Dial
	R	Filter bracket terminal. Also, disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal.

TABLE B
LINE AND RINGER CONNECTIONS

Wire or Lead	Individual or Bridged	Ring Party All Classes of Service	Tip Party Flat Rate
Mounting Cord in Set	R	L1	L1
	G	L2Y	L2Y
	Y	Gnd	Gnd
Ringer Leads	R	K	Gnd
	BK	K	K
Mounting Cord at Connecting Block	R	R	R
	G	G	G
	Y	Y	Y
Line Wire at Connecting Block	Ring	R	R
	Tip	G	G
	Grd	Y	Y

Fig. 1—302 E, G, 5302 G Telephone Sets