


71-B-74

SEICAL #684-BA3 SUB SET

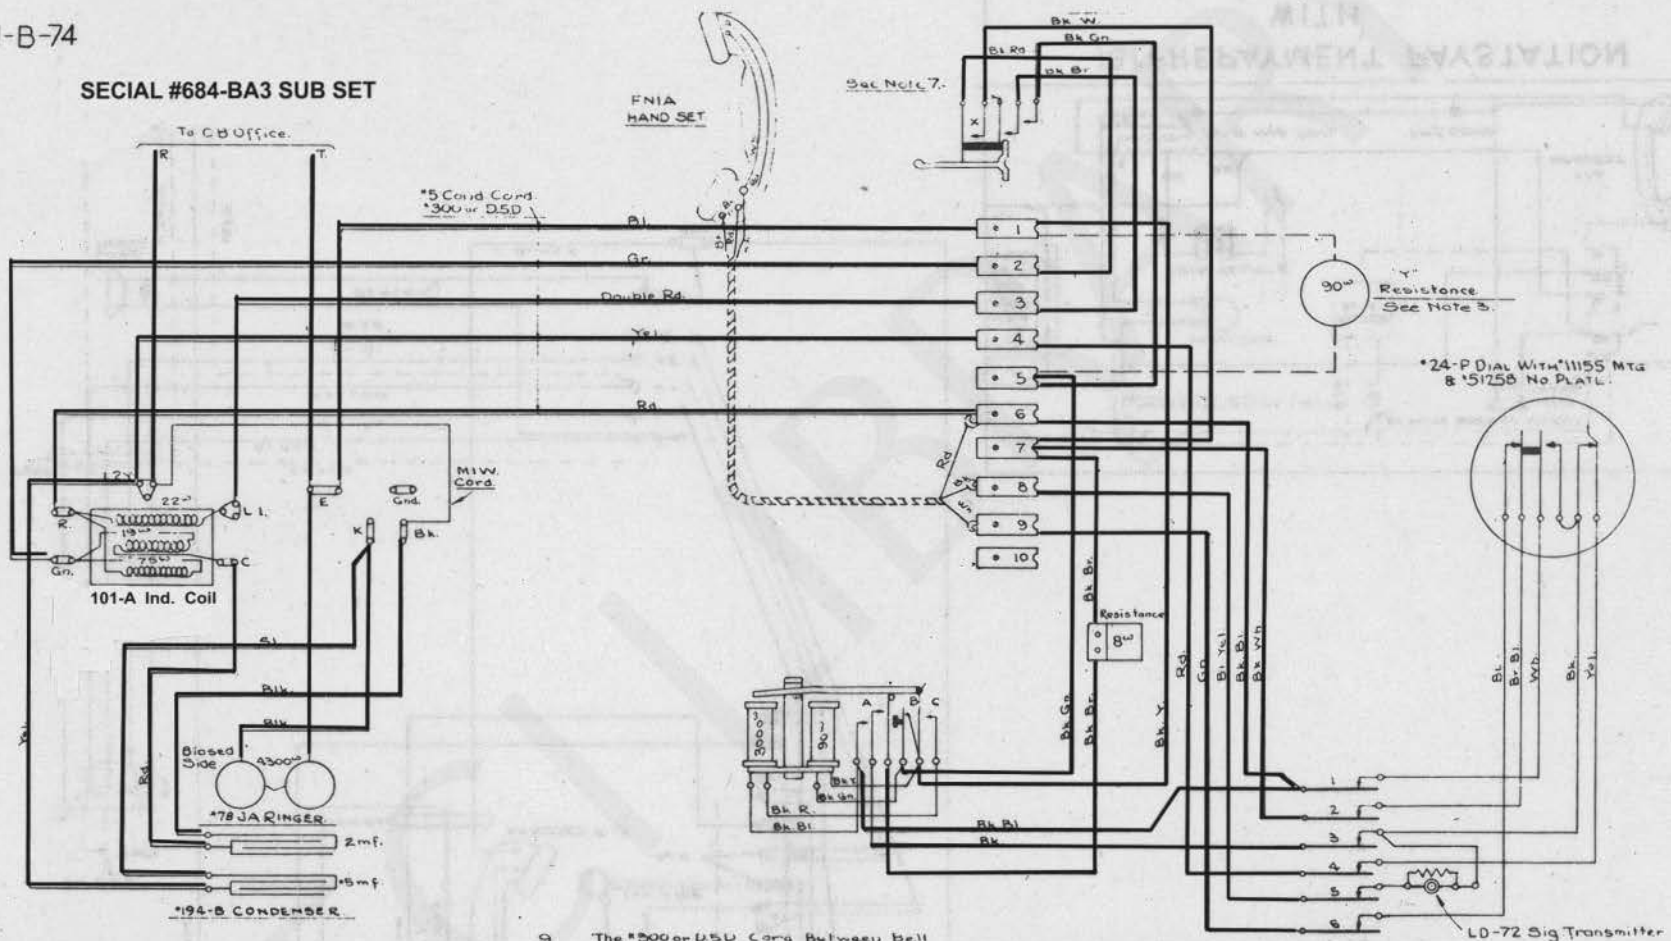

NOTES:


1. "X" Contact To Break First And Make Last.
2. **COIN COLLECTOR.**
 "a" Spring Assembly "A&C" Are Operated By 90^{ohm} Magnet.
 "b" Spring Assembly "A" Is Restored And Assembly "B" Operated "When Coin Is Deposited."
 "c" All Spring Assembly Restored By 3000^{ohm} Mag.
3. When Line Resistance Exceeds 225^{ohm} Remove 90^{ohm} Resistance Coil "Y".
4. If Bell's Tap When Dialing Reverse Ringer Conns. To Term. E&K. If Necessary Adjust Tension of Bias Spring To Hold Armature Against Core, But Not To Interfere with Ringing.
5. Clearance Between Clapper And Bell To Be Approx. .008"
6. The "684 BA Desk Set Box Shall Be Changed And Connected As Follows.
 (a) Connect The Tip Side Of The Line (Grd) To Term "E".
 (b) " " Ring " " " " (Batt) " " "L2".
 (c) " " Red Ringer Lead To Term "E".
 (d) Strap Bk & L2 Using A Miw. Cord.

On The "34-A-11 NE Coin Collector Disconnect The Blk-Bi Lead From Term. 6 To The Sw. Hook.

8. Max. Green Lead Between Terminal 9 And Housing Spring 3rd.

9. The 300 or 0.50 Cord Between Bell Box & The Coin Collector Shall Be Connected as Follows:

TERM. #684 SET	CORD COND.	TERM. 34-A-11 SET
E	Blue	1
Gn	Green	2
L2	Double Red	3
R	Yellow	4
	Red	6

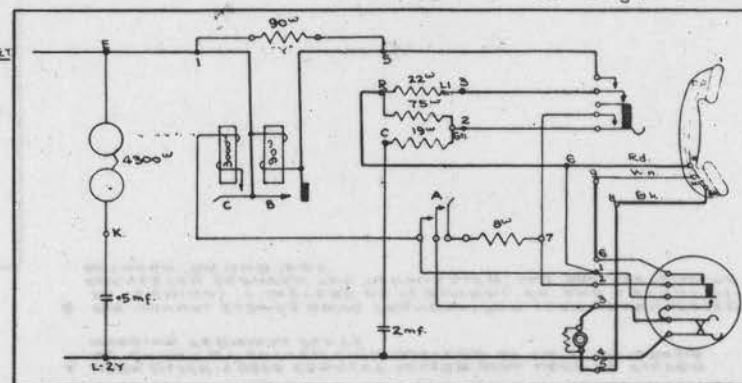

34-A-11 PAYSTATION

WITH 684 BA DESK SET BOX

FOR POST PAYMENT DIAL SERVICE IN SMALL DIAL OFFICE