


901 TELEPHONE

FOR METALLIC RINGING, CONNECT RINGER TO 5 AND 10.
 FOR GROUNDED RINGING, CONNECT RINGER TO 5 AND 12.
 FOR RINGING OUT WITH BELL SILENT, CONNECT RINGER TO 5 AND 13.
 FOR RINGING OUT METALLIC, CONNECT GEN. YEL. TO 2.
 FOR RINGING OUT THRU GROUND, CONNECT GEN. YEL. TO 12.

911 TELEPHONE WITH HOOKSW. LATCH

SAME AS ABOVE EXCEPT HOOKSWITCH IS WIRED GREEN LEAD TO 1, WHITE LEAD TO 11.
 LINE CORD, YELLOW CONNECTED TO 4 (FROM 3).
 CONDENSER, GREEN CONNECTED TO 3 (FROM 4).

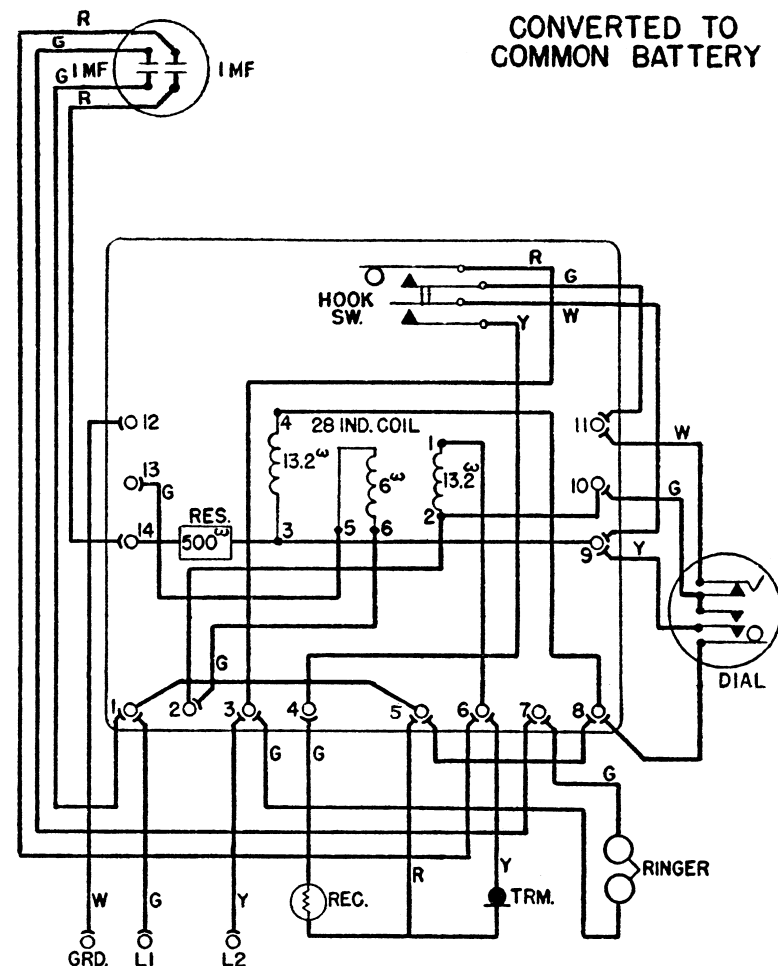

TO CONVERT TO COMMON BATTERY. DISCONNECT GEN. LEADS Y, W, B FROM 2, 5, 13 AND REMOVE GENERATOR. INSTALL DIAL BLANK OR DIAL. REMOVE GEN. COVER FROM TEL. CASE.

CHANGE: INDUCTION COIL LEADS (G) FROM 7 & 11 TO 2 & 13; HANDSET LEADS, RED FROM 10 TO 5, GREEN FROM 9 TO 4, YELLOW FROM 7 TO 6; HOOKSWITCH LEAD, WHITE 1 TO 9; CONDENSER LEADS GREEN 4 & 8 TO 1 & 7; STRAP 5 & 8.

FOR METALLIC RINGING, CONNECT RINGER TO 7 & 3;
 FOR GROUNDED RINGING, CONNECT RINGER TO 7 & 12;
 WHEN DIAL IS USED, CONNECT HOOKSWITCH GREEN LEAD TO 11.
 WHEN DIAL IS NOT USED, CONNECT HOOKSWITCH GREEN LEAD TO 10.

WITH 911 TELEPHONE: CONNECT HOOKSWITCH WHITE LEAD TO 6,
 HANDSET GREEN LEAD TO 9, HANDSET YELLOW LEAD TO 4.