## TYPE 183 TELEPHONE SET MODIFICATION FOR USE IN TYPE 10A1, 10A2, AND 16A KEY TELEPHONE SYSTEMS

## 1. GENERAL

- 1.01 This section describes the modifications required to adapt the Type 183 SPACE-MAKER® compact suspension telephone set for A-lead control in Type 10A1, 10A2, and 16A key telephone systems. The modified set may be used in conjunction with an external key or key adapter, or may be connected permanently to one of the key system lines.
- 1.02 This section is reissued to update information on the transmission network used in the Type 183 telephone. Wiring degrams are also updated. Due to the nature of the changes involved, change indicators are omitted. Remove the previous issue of this section from the binder or microfiche file and replace it with this issue.
- 1.03 GTE AE practices are used by GTE employees for operating and maintaining the equipment it manufactures and sells. These practices may change or may not be suitable in a specific situation and so are recommended as suggested guidelines only. GTE AE hereby disclaims any responsibility and/or liability for any consequential or inconsequential damages that may result from the use of such practices. GTE AE acknowledges that the customer's special requirements policy/practices may take precedence over those supplied by GTE AE if conflicts develop during installation and ongoing operation.

## 2. MODIFICATIONS

Type\_183\_Telephones Equipped\_With\_Self-Compensating HB-1055-A Transmission\_Network

2.01 The wiring diagram for Type 183 telephones equipped with self-compensating mounted transmission networks and modified for key system operation is shown in Figure 1. To modify these telephones for key system operation, perform the following procedure:

- (a) Remove the red hookswitch lead from terminal 2. Tape and store.
- (b) Remove the hookswitch lead from terminal 8. Tape and store.
- (c) Connect a jumper between terminals 11 and 10.
- (d) Connect the station wire as follows:
  - (1) Red to terminal 10 (L1).
  - (2) Green to terminal 8 (L2).
  - (3) Yellow to red hookswitch lead (A1) (refer to Note 6 in Figure 1).
  - (4) Black to white hookswitch lead (A) (refer to Note 6 in Figure 1).

Type\_183\_Telephones Equipped\_With\_Self-Compensating D-38387-C Transmission\_Network

- 2.02 The wiring diagram for Type 183 telephones equipped with self-compensating, steel-cased, potted transmission networks and modified for key system operation is shown in Figure 2. To modify these telephones for key system operation, perform the following procedure:
- (a) Terminate the red hookswitch lead on terminal 20.
- (b) Terminate the white hookswitch lead on terminal 10.
- (c) Connect a red wire between terminals 11 and 15.
- (d) Connect the station wire as follows:
  - (1) Red to terminal 15 (L1).
  - (2) Green to terminal 16 (L2).
  - (3) Yellow to terminal 20 (A1).
  - (4) Black to terminal 10 (A).

Type\_183\_Telephones\_Equipped\_With Manually Adjusted Series Rheostats

2.03 Type 183 telephones equipped with manually-adjusted series rheostats require no modification prior to installation on a key system line because they are already arranged for A-lead control at network terminals 17 (A1) and 18 (A), as shown in Figure 3.

Registered trademark of GTE Automatic Electric Incorporated.

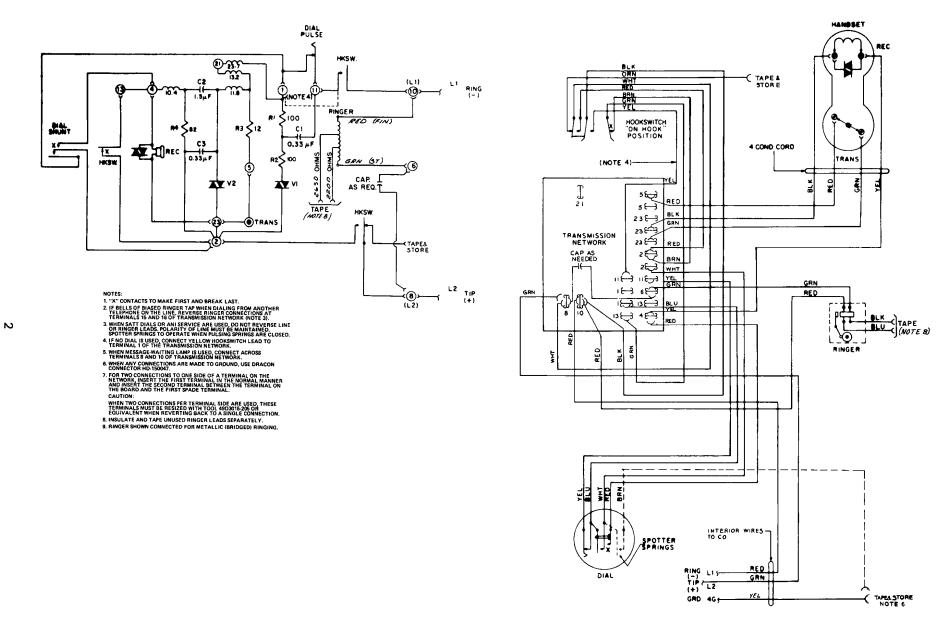


Figure 1. Schematic and Wiring Diagram for Type 183 Telephone Equipped With HB-1055-A Transmission Network.

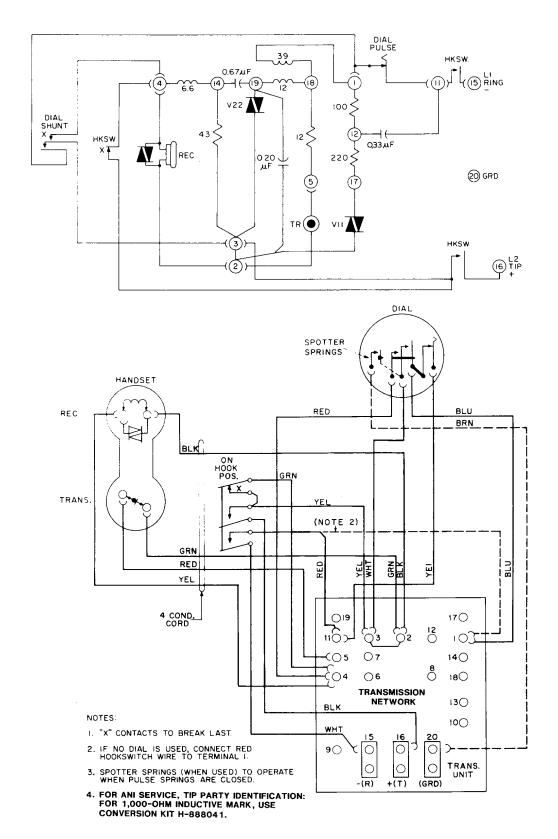


Figure 2. Schematic and Wiring Diagram for the Self-Compensating Type 183 Telephone Equipped With D-38387-C Transmission Unit.

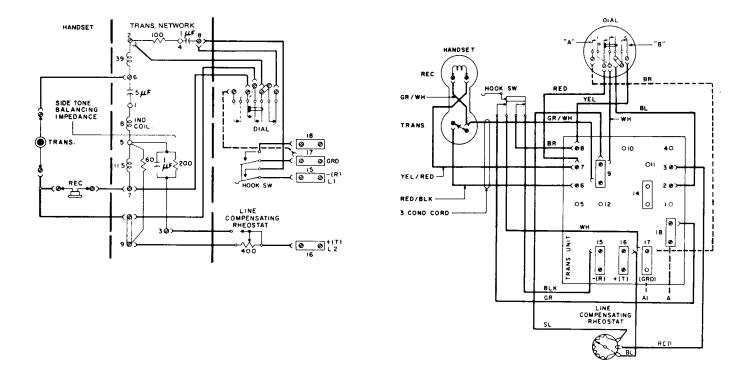


Figure 3. Schematic and Wiring Diagram for the Manually-Adjusted Type 183 Telephone Equipped With D-38387-C Transmission Network.